



F15W/T8/18"/BL368

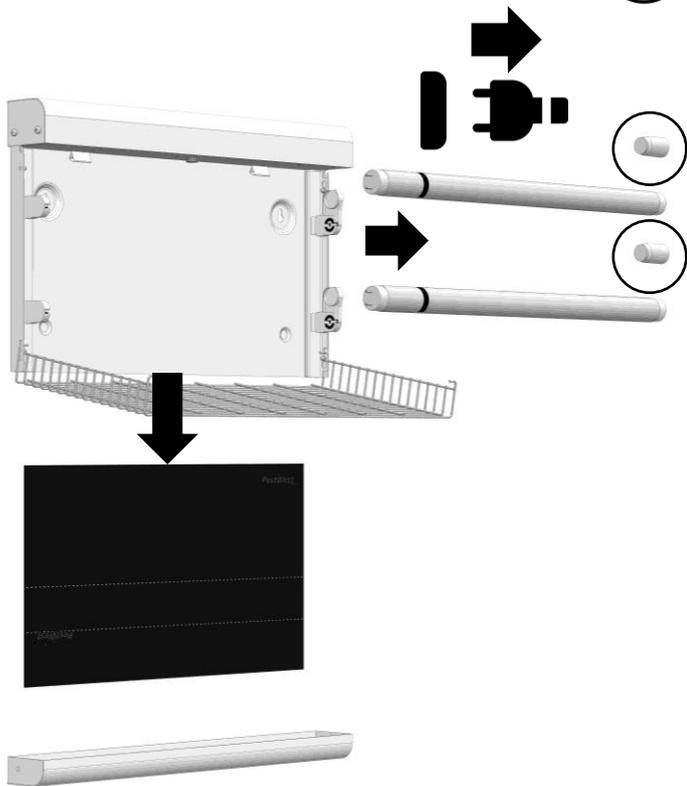

QBL LED

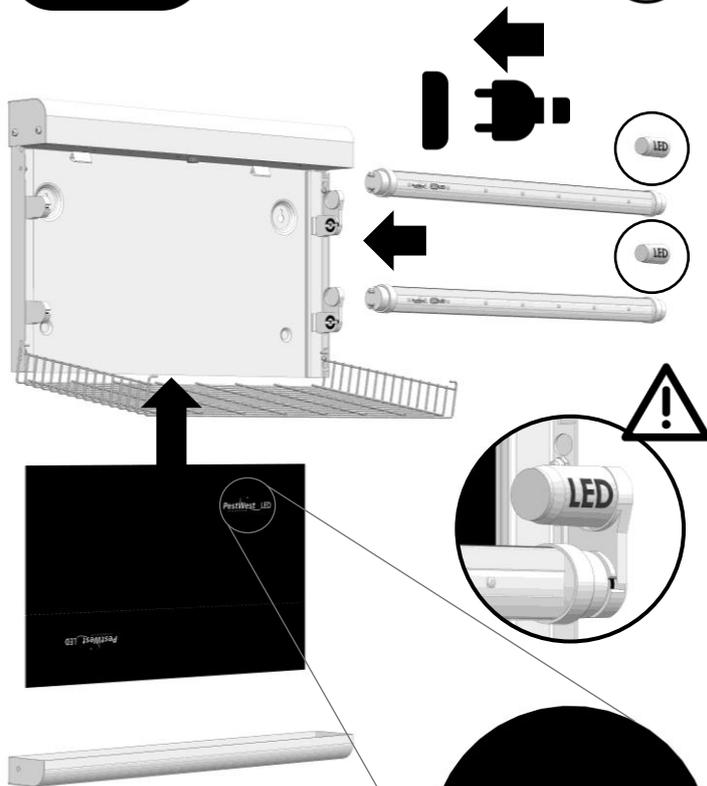

PestWest[®]
www.pestwest.com





Installation Guide

Precautions

- To avoid an electric shock, switch off the machine before installation.
- The PestWest QBL LED tubes are to be used in traps with magnetic ballasts and starters only.
- The provided LED starter must be used with the PestWest QBL LED tube.
- Do not install where dangerous concentrations of flammable gases or dusts are likely to occur.
- The PestWest QBL LED is designed for indoor use only and is not waterproof.

Installation

1. Switch off the machine and unplug from the mains electricity supply.
2. Remove the 15W/T8/18" BL368 fluorescent tubes and fluorescent starters by rotating them 90 degrees and remove them from the trap.
3. Fit the PestWest QBL LED tubes ensuring the LEDs are facing out of the trap.
4. Fit the LED starters. (Note the LED tubes will not operate without the LED starters.)
5. Replace the glue board with a PestWest 18" LED glue board (Note efficacy will be significantly reduced when using ordinary glue boards, fit LED glue boards for maximum efficacy).
6. Plug the unit back in and switch it on. Check the LED tubes are operating.